



GENUINE PARTS



## INSTALLATION INSTRUCTIONS

- |                 |  |
|-----------------|--|
| 1. DESCRIPTION: | Keyless Entry Pad  |
| 2. APPLICATION: | All 2005 and later Nissan and Infiniti vehicles with the Remote Keyless Entry system.<br>Not applicable to Sentra or vehicles with the Intelligent Key system. |
| 3. PART NUMBER: | 999KE AR000  |

### 4. CAUTIONS AND NOTES

#### CAUTION


- Nissan and Infiniti vehicles support a maximum of five keyless entry products (key fobs and keypad). When a sixth unit is programmed the first will become inactive. Refer to your owner's manual for more information.
- For proper adhesion, the mounting surface should be at least 60°F (15°C).
- Do not reveal your code to anyone else.

This device complies with part 15 of the FCC rules and with RS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

#### NOTE



- Do not attach the keypad to the vehicle until after it has been programmed.
- When pressing the buttons on the keypad, press the middle of the buttons to ensure activation.
- After five seconds of idle time, the keypad will reset itself. When programming or using the keypad, avoid delays between button presses. It may be helpful to read each section of these instructions before proceeding.
- To preserve battery life, the backlight will turn on only during low light conditions.
- Do not set a code that uses three of the same button in a row.
- Do not use five buttons in sequential order.
- The factory set code will work even if you have set your own personal code.
- If you set a second personal code it will erase your first personal code.
- Place this sheet with the vehicle owner's manual when complete.

### 5. PROGRAMMING THE VEHICLE TO RECOGNIZE THE KEYPAD



1. Close all doors.
2. Insert the key into the ignition key cylinder and remove it quickly, repeating this action until the hazard warning lamps flash twice. Each vehicle is different, so it may take between six and twelve attempts before this will happen.
3. Insert the key into the ignition key cylinder and turn it to the ACC position within five seconds of step 2.
4. Press the 7/8 and 9/0 buttons on the keypad simultaneously.  The hazard warning lamps will flash twice.
5. Open the driver's door to end vehicle-device pairing. Check the operation of the keyless entry system by pressing the 7/8 and 9/0 buttons simultaneously. If the doors do not lock, repeat section 5 starting at step 1. Remember that each programming step must be completed within five seconds of the previous step. If the problem persists, check the vehicle owner's manual for programming key fobs, and check with a Nissan dealership to confirm that the keypad is compatible with your vehicle.

## INSTALLATION INSTRUCTIONS – Keyless Entry Pad

### 6. PROGRAMMING A PERSONAL ENTRY CODE

1. Enter the unique factory-set code, as indicated to the right.
2. Within five seconds, press and hold the 1/2 button.  While pressing the 1/2 button, press and hold the 5/6 button for at least two seconds until the 9/0 button flashes twice or the door unlocks.  Release both buttons.
3. Within five seconds, enter your desired personal 5-digit code. Each number must be entered within five seconds of each other.
4. The doors will lock then unlock to confirm that your personal code has been programmed to the module.

To remove your personal code:

1. Enter the unique factory-set code. Within five seconds, press and hold the 1/2 button,  then press and hold the 7/8 button  for at least two seconds. Continue holding down these buttons until the 9/0 button flashes twice or the door locks then unlocks to confirm that your personal code has been removed. Release both buttons.

### 7. ADHERING KEYPAD TO THE VEHICLE

#### CAUTION

- Do not adhere to moveable glass or windshield.
- The tape is very sticky and will adhere fast once contact is made. Use care when positioning the keypad.

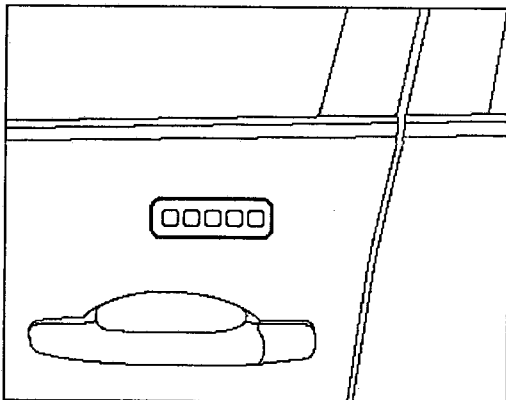





Figure 1

1. This product is designed to attach to your car door, centered between the door handle and the window sill. See **Figure 1**. The mounting surface must be relatively flat. Before removing the backing tape, hold the keypad up to the desired mounting surface to confirm that all tape will contact the mounting surface.
2. Use masking tape to mark the keypad position and alignment before adhering keypad.
3. Use the provided alcohol wipe to clean the surface where the keypad is to be adhered. Let dry.
4. Pull the tape tabs off the keypad, center the keypad and press onto the door surface. Be sure to press firmly on all edges to ensure proper adhesion of the tape.

### 8. USING THE KEYPAD

- To unlock the driver's door, enter your personal 5-digit code or the factory set code. Each number must be pressed within five seconds of each other.
- To unlock all doors, press the 3/4 button within three seconds of entering a valid keypad code. Hold down the 3/4 button to lower the windows, if equipped. 
- To unlock the trunk, press and hold the 5/6 button within three seconds of entering a valid keypad code. Use the 5/6 button to open or close the power lift gate, if equipped. 
- To unlock and slide the passenger's-side power sliding door, press and hold the 7/8 button within three seconds of entering a valid keypad code. Press and hold the 9/0 button for the driver's-side power sliding door.
- To lock all doors, press the 7/8 and the 9/0 buttons simultaneously. If all doors are closed, the horn will chirp once; if any door is ajar, the horn will not chirp. **NOTE:** Horn may not chirp – see the owner's manual. 
- **NOTE:** If you unlock the door with the keypad and the locks cycle one additional time, it is time to replace the unit. The battery is not replaceable.
- **NOTE:** If the wrong code has been entered 7 times (35 consecutive button presses), the keypad is disabled for one minute and the keypad light will flash during this time.